



## Installation Guide

# 10/100 Fast Ethernet Switch with 100FX Connectivity

KS-105F-B Series



(C) 2010 KTI Networks Inc. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any directive work (such as translation or transformation) without permission from KTI Networks Inc.

KTI Networks Inc. reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of KTI Networks Inc. to provide notification of such revision or change.

For more information, contact:

**United States**

KTI Networks Inc.  
P.O. BOX 631008  
Houston, Texas 77263-1008

Phone: 713-2663891  
Fax: 713-2663893  
E-mail: [kti@ktinet.com](mailto:kti@ktinet.com)  
WWW: <http://www.ktinet.com/>

**International**

Fax: 886-2-26983873  
E-mail: [kti@ktinet.com.tw](mailto:kti@ktinet.com.tw)  
WWW: <http://www.ktinet.com.tw/>

The information contained in this document is subject to change without prior notice. Copyright (C) All Rights Reserved.


#### TRADEMARKS

Ethernet is a registered trademark of Xerox Corp.

#### FCC NOTICE

This device complies with Class B Part 15 the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including the interference that may cause.

#### CE NOTICE

Marking by the symbol  indicates compliance of this equipment to the EMC directive of the European Community. Such marking is indicative that this equipment meets or exceeds the following technical standards:

EMC Class B

EN 50081-1/1992 : EN55022, EN61000-3-2, EN61000-3-3

EN 50082-1/1998 : EN61000-4-2, EN61000-4-3, EN61000-4-4, EN61000-4-5,  
EN61000-4-6, EN61000-4-8, EN61000-4-11


# Table of Contents

<b>1. Introduction .....</b>	<b>5</b>
1.1 Features .....	6
1.2 Specifications .....	7
<b>2. Installing the Switch .....</b>	<b>9</b>
2.1 Unpacking .....	9
2.2 Checking AC Power .....	9
2.3 Installing the Switch .....	10
<b>3. Making Network Connections .....</b>	<b>11</b>
3.1 Switched Ports .....	11
3.2 Making UTP Connections .....	11
3.3 Making Fiber Connection .....	12
<b>4. LED Indicators .....</b>	<b>14</b>
4.1 LED Panel .....	14
4.2 Interpretation .....	14

# 1. Introduction

---

This 5-port Fast Ethernet switch series provides four 10/100 TP ports and one 100BASE-FX fiber port, each capable of transmitting or receiving information simultaneously at full wire speed to control and allocate the network bandwidth.

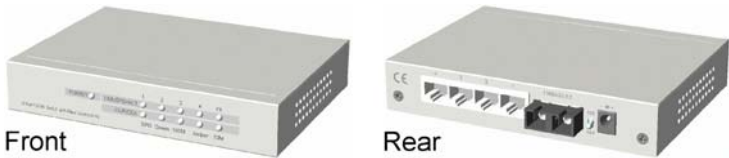

The key features of the switch series are:


- **Optimized Bandwidth** : Combining five 100Mbps-based Fast Ethernet switched ports, the switch delivers a high network bandwidth for your Fast Ethernet network
- **Easy Migration** : With 10BASE-T support on each port, the switch provides a non-disruptive and smooth migration path from Ethernet to a Fast Ethernet network.
- **Fiber Uplink Support** : With 100BASE-FX port, the switch provides a connectivity to a Fast Ethernet network via fiber cable.
- **Easy Installation** : With the functions of auto-speed-sensing and auto-negotiation on each port, the switch supports plug-and-play installation which eliminates configuration problems.

## 1.1 Features

Designed for resolving congestion problems caused by bandwidth-hungry devices and bandwidth-intensive applications as well as a high number of users, the switches not only adhere to the IEEE 802.3 10BASE-T, 802.3u 100BASE-TX and 100BASE-FX standards, but also feature:

- Four 10/100BASE-TX auto-negotiation switched ports and one 100BASE-FX port for flexible connections to desktop PCs, servers and Fast Ethernet devices.
- The 10/100BASE-TX switched ports support:
  - auto-negotiation with auto-negotiation devices
  - full-duplex or half-duplex operation
  - automatic MDI/MDI-X configuration
- For the 100BASE-FX fiber port, the switch series support variety of fiber connectors for different application needs. The fiber connectors include ST, SC, MT-RJ, and VF-45 types for multimode and single mode fiber cables.
- Supports duplex mode selector for the 100BASE-FX fiber port.
- Self learning for active MAC addresses and address aging
- Store and forward switching to ensure only good packets are forwarded
- Forwarding and filtering at full wire speed
- Supports IEEE 802.3x flow control for full-duplex operation
- Supports back-pressure flow control for half-duplex operation
- Comprehensive LED indicators provide quick, easy to read port and switch information

## 1.2 Specifications

<b>10/100 Ports</b>	IEEE 802.3 10BASE-T, IEEE 802.3u 100BASE-TX std. Shielded RJ-45 jacks with Auto MDI-X detection Auto-negotiation capable Speed for 10Mbps or 100Mbps Full-duplex or half-duplex mode support
<b>100FX Port</b>	IEEE 802.3u 100BASE-FX compliant Fixed 100Mbps operation Duplex mode selector - full duplex or half duplex
<b>Flow control</b>	IEEE 802.3x pause packet for full duplex operation Back-pressure for half duplex operation
<b>Cables</b>	10BASE-T Cat. 3, 4, 5 or higher (100 meters max.) 100BASE-TX Cat. 5, 5e or higher (100 meters max.) 100BASE-FX multimode or single mode fiber cable
<b>LED indicators</b>	Power status Per port : Speed, Link, Activity, Duplex, Collision status
<b>Forwarding rate</b>	14,880 pps for Ethernet (10M) 148,800 pps for Fast Ethernet (100M)
<b>Filtering address</b>	Multicast/Broadcast/Unicast address
<b>MAC address</b>	2K entries
<b>Aging time</b>	280 seconds
<b>Environment</b>	Temperature 0°C to 40°C Relative humidity 10% to 90% non-condensing (* The operating temperature range of the bundled power adapter may differ from the temperature range of the main device.)
<b>Dimensions</b>	144 mm x 104.5 mm x 26 mm (WxDxH) 5.67 x 4.11 x 1.02 inch
<b>DC IN Jack</b>	D6.3mm—  +D2.0mm
<b>DC IN voltage</b>	Operating +5V ~ +12VDC (+/-5%)

---

**Consumption**    DC input power consumption 3W @+5V

---

### **100FX Port Fiber Specifications**

**Model: KS-105FB**

#### **Duplex Series**

<b><u>Model Ext</u></b>	<b><u>Fiber</u></b>	<b><u>Wavelength</u></b>	<b><u>Tx Power</u></b>	<b><u>Sens.</u></b>	<b><u>Ref.Distance</u></b>
-T	ST	MMF 1310nm	-20 ~ -14dBm	-32dBm	2km
-C	SC	MMF 1310nm	-20 ~ -14dBm	-31dBm	2km
-JM	MT-RJ	MMF 1310nm	-19 ~ -14dBm	-31dBm	2km
-VM	VF-45	MMF 1310nm	-20 ~ -14dBm	-31dBm	2km
-SA2	SC	SMF 1310nm	-15 ~ -8dBm	-31dBm	20km
-SL2	SC	SMF 1310nm	-15 ~ -8dBm	-32dBm	20km
-SL3	SC	SMF 1310nm	-15 ~ -8dBm	-34dBm	30km
-SL4	SC	SMF 1310nm	-5 ~ 0dBm	-34dBm	40km
-SL6	SC	SMF 1310nm	-5 ~ 0dBm	-35dBm	60km
-SL7	SC	SMF 1310nm	-3 ~ +3dBm	-37dBm	70km
-SL9	SC	SMF 1310nm	0 ~ +5dBm	-37dBm	90km
-SL10	SC	SMF 1550nm	-3 ~ +3dBm	-37dBm	100km
-SL12	SC	SMF 1550nm	0 ~ +5dBm	-37dBm	120km

Ref. Distance : reference distance when operating on full duplex mode

MMF : Multimode fiber - 62.5/125 $\mu$ m, 50/125 $\mu$ m

SMF : Single Mode fiber - 9/125 $\mu$ m

#### **Single Fiber Bi-Di WDM Series**

<b><u>Model Ext.</u></b>	<b><u>Fiber</u></b>	<b><u>Wavelength</u></b>	<b><u>Tx Power</u></b>	<b><u>Sens.</u></b>	<b><u>Ref.Distance</u></b>
-W3515	SC SMF Tx	1310nm-14 ~ -8dBm	-31dBm	15-20km	
	Rx	1550nm			
-W5315	SC SMF Tx	1550nm-14 ~ -8dBm	-31dBm	15-20km	
	Rx	1310nm			
-W3540	SC SMF Tx	1310nm-8 ~ 0dBm	-34dBm	40km	
	Rx	1550nm			
-W5340	SC SMF Tx	1550nm-8 ~ 0dBm	-34dBm	40km	
	Rx	1310nm			

#### **Single Mode CWDM Series**

<b><u>Model Ext.</u></b>	<b><u>Fiber</u></b>	<b><u>Wavelength</u></b>	<b><u>Tx Power</u></b>	<b><u>Sens.</u></b>	<b><u>Ref.Distance</u></b>
-CxxW40	SC SMF Tx	1xx0nm	-5 ~ 0dBm	-35dBm	40km
	Rx	1100-1650nm			
-CxxW80	SC SMF Tx	1xx0nm	0 ~ +5dBm	-37dBm	80km
	Rx	1100-1650nm			

Tx 1xx0nm : 1470, 1490, 1510, 1530, 1550, 1570, 1590, 1610nm




## 2. Installing the Switch

---

### 2.1 Unpacking


Check to see that you have everything before you start the installation.

- Installation guide
- The switch unit
- One AC power adapter for the unit




### 2.2 Checking AC Power

Before you begin the installation, check the AC voltage of your area. The AC power adapter which is used to supply the DC power for the unit should have the AC voltage matching the commercial power voltage in your area. The specifications of the AC power adapter are:


- AC input power: AC power voltage of your area
- DC output power: Rating options: +7.5V 1A, +5V 1A min.
- DC plug type: — —  — +

The DC power jack for the AC power adapter is located on the rear of the switch as shown below:

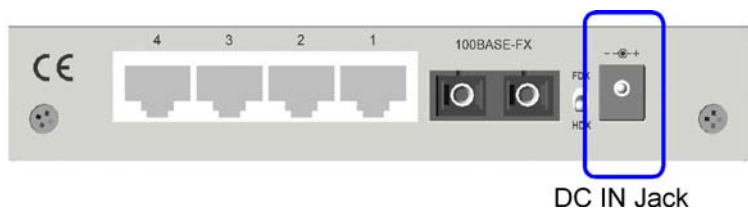


## 2.3 Installing the Switch

1. Install the switch with the AC power adapter provided.

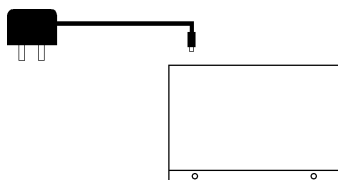

2. Connect the power adapter cable to the switch before connecting the adapter to the AC outlet.

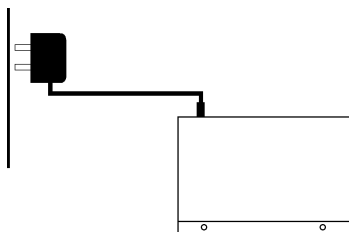


## 3. Making Network Connections

---

### 3.1 Switched Ports

The following figure shows the locations of the switched ports:

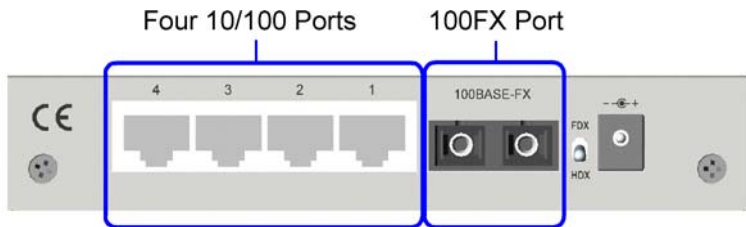

### 3.2 Making UTP Connections

#### 10/100 TP Port Configuration

All 10/100 TP ports support configuration as follows:

- Auto-negotiation capable
- Highest capability : 100M Full duplex
- Speed : auto-sensing for 100Mbps or 10Mbps
- Duplex : Full duplex, Half duplex
- Auto MDI-X function

The following table lists the configuration used for the 10/100 port when it connects to different devices:

<b><u>Connected Device</u></b>	<b><u>Configuration Used</u></b>
10BASE-T hub port	10Mbps, half-duplex
100BASE-TX hub port	100Mbps, half-duplex
Auto-negotiation port	Determined via auto-negotiation process
Non-auto*1 half-duplex port	auto-speed-sensing *2, half-duplex
Non-auto full-duplex port	Not supported

\*1 Non-auto : non-auto-negotiation

\*2 speed is determined by auto-sensing function

## Cables

Depending on the connection speed, use the proper UTP cables:


<u>Speed</u>	<u>Cables used</u>	<u>Distance</u>
100M	Cat. 5, 5e, or higher grade	100 meters
10M	Cat. 3, 4, 5, 5e, or higher grade	100 meters

### Auto-MDI-X Function

An Auto-MDI-X function will automatically detect if a crossover is required and make the swap of Tx pair and Rx pair internally. With this function, straight-through cable can be used for any connection. MDI to MDI-X connection rule is not necessary anymore. In the switches, all TP ports are equipped with this function. You can use just straight-through type of cables for all your connections.


## 3.3 Making Fiber Connection

For different fiber connections, several alternative models can be selected for different fiber connections. Refer to Section 1.2 for the model selection. The following figure illustrates a connection example between two SC fiber ports:

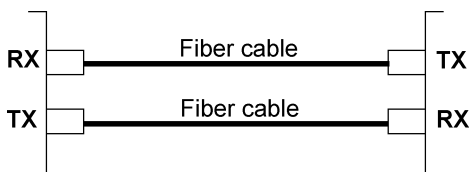

## 100FX Duplex Selector

This selector is used for 100FX port duplex mode selection as follows:

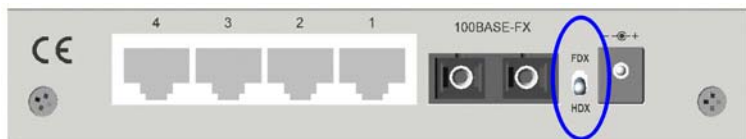

100FX Duplex Selector

Setting Position	Duplex Mode
FDX	Full duplex
HDX	Half duplex

The following table lists the maximum **MM** fiber cable length connecting to different devices:


<u>Connected Device</u>	<u>Distance (MMF cable)</u>
Network card half-duplex fiber port	400 m
Network card full-duplex fiber port	2 km
Class I hub half-duplex fiber port	160 m
2 Class II hub half-duplex fiber port	112 m
Switched half-duplex fiber port	400 m
Switched half-duplex fiber port	2 km

## 4. LED Indicators

---

### 4.1 LED Panel

The switch provides comprehensive LED indicators for diagnosing and monitoring the operation of the switch as illustrated below:

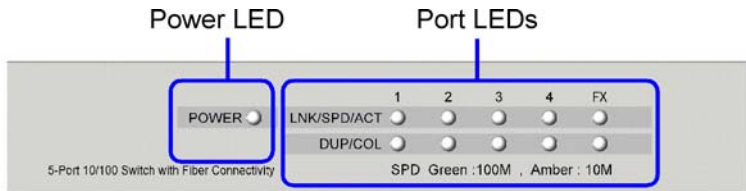

### 4.2 Interpretation

#### LED Functions

- POWER LED:** indicates the power status of the switch.
- LNK/SPD/ACT LED:** indicates the link status, connection speed status, and traffic status of the switched port
- DUP/COL LED:** indicates the duplex status and collision status of the switched port

#### LED States and Indications

<u>LED</u>	<u>State &amp; Color</u>		<u>Indication</u>
POWER	Off	-----	No power is supplied to the switch.
POWER	On	Green	Power is being supplied to the switch.
LNK/SPD/ACT	On	Green	Speed 100M, link up
LNK/SPD/ACT	On	Amber	Speed 10M, link up
LNK/SPD/ACT	Blink	Green	Speed 100M, link up, Tx/Rx activities
LNK/SPD/ACT	Blink	Amber	Speed 10M, link up, Tx/Rx activities
LNK/SPD/ACT	Off	-----	Link down
DUP/COL	On	Green	Full duplex mode
DUP/COL	Off	-----	Half duplex mode, no collision
DUP/COL	Blink	Green	Half duplex mode, collisions